


# Camera Arm

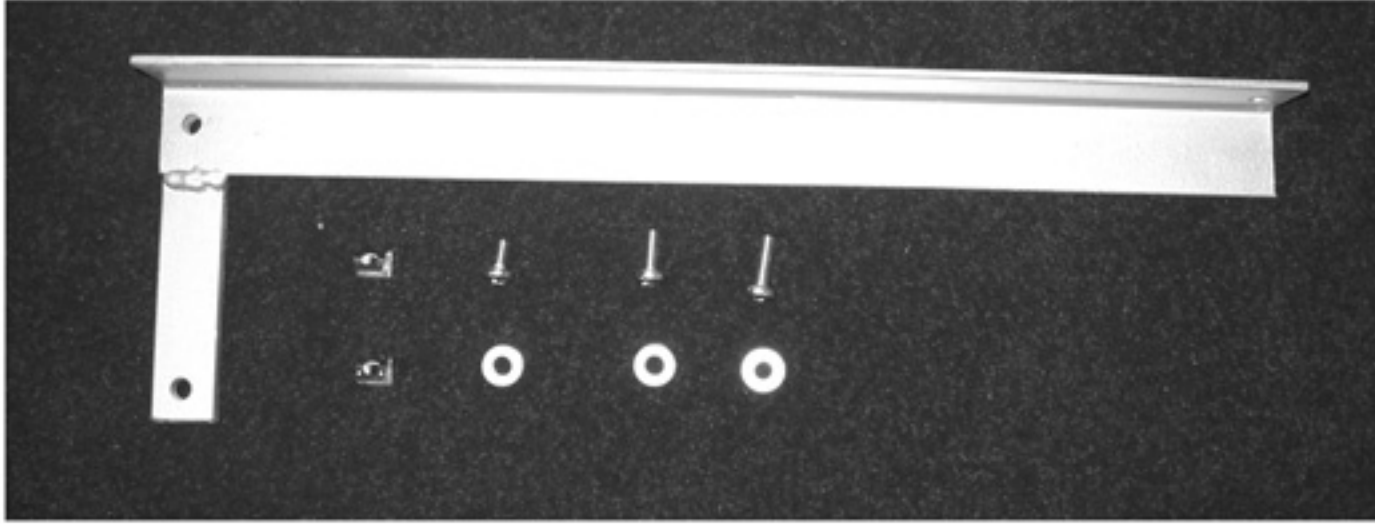

- 1 arm
- 2 spring nuts
- 1 short screw
- 2 medium screws
- 3 washers

**1. Place spring nuts into the middle of the workstation pole.**



**2. Using the 2 medium screws, attach the camera arm to the workstation**



**3. Use the small screw to attach the tripod head to the camera arm. Attach your camera and you are done.**

