


Light Attachment

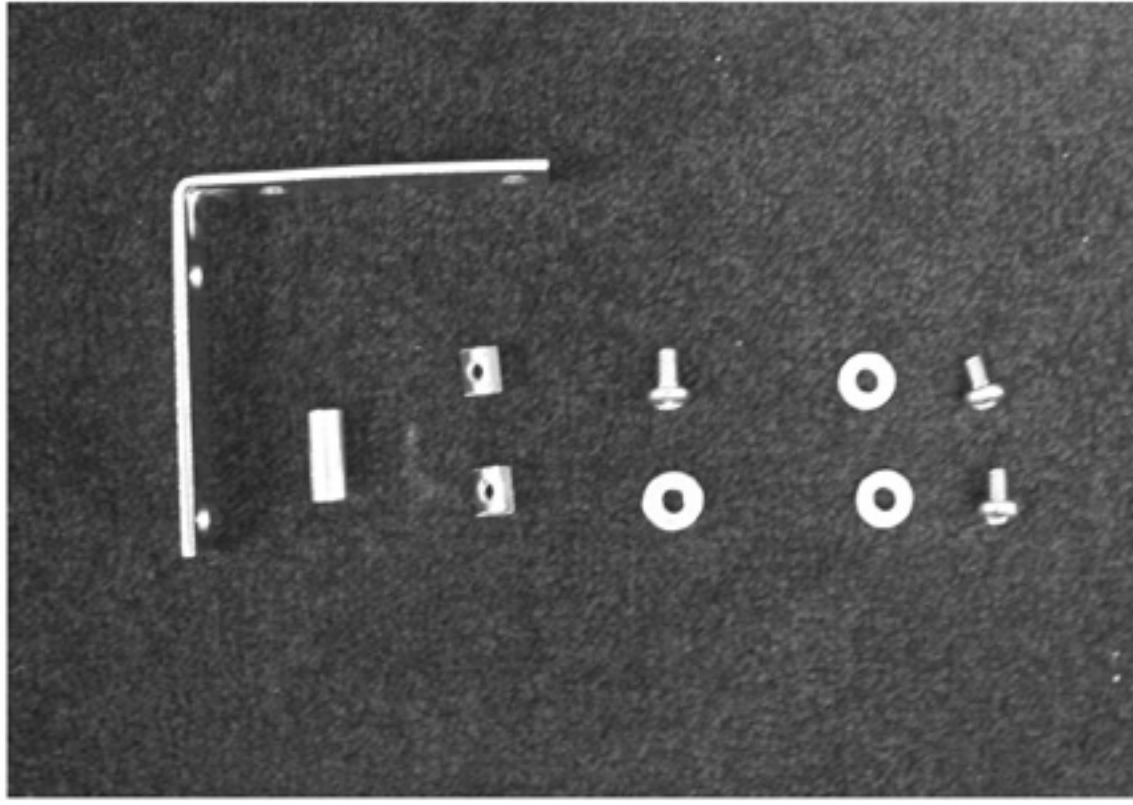

- 1 "L" arm
- 2 spring nuts
- 2 thin thread screws
- 3 washers
- 1 regular screw
- 1 round threaded stud

1. Place spring nuts into the top of the workstation pole.



2. Using the 2 thin thread screws, attach the "L" arm to the workstation



3. Use the regular screw and the round threaded stud to attach the Light and you are done.

